


## 1 Installing the CD-RW Driver for Mac OS X

(1) Put Driver CD into the CD-ROM of your Mac

(2) Copy the CYMSC\_MACOSX\_1\_4J.pkg.hqx file from the CD-RW\_Driver\MACosx\_V1.2 folder of the driver CD onto the Macintosh desktop.

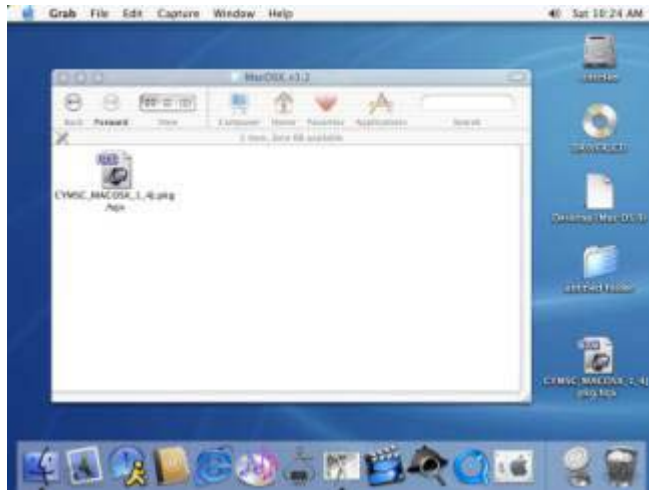

(3) Double click the CYMSC\_MACOSXM1M4J.pkg.hqx file.

It will add two icons, Cypress USB Storage 1.4j.pkg and Cypress USB Storage 1.4J.p...sit.



(4) Double click the Cypress USB Storage 1.4J.pkg file and it will then enter the install process.

Enter the installation password and then click OK.



(5) Welcome to the Cypress USB Storage Driver 1.4 installation screen appears. Click Continue.



(6) Click Continue on the Important information screen.




(7) Select a Destination and click Continue



(8) The Easy Install screen appears. Click Install.



(9) Click Continue Installation.

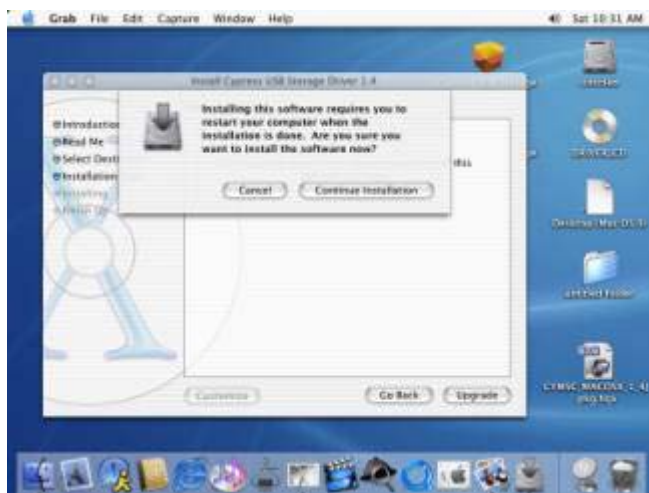

(10) After the software is successfully installed, click Restart.



Icons for both Series the Card Reader and CD-RW will appear on the desktop.



A warning message, *You cannot burn this disc in the Finder because the disc drive is not supported.*, pops up after inserting a blank CD-R and the USB cable is connected.



**Just ignore** this message and continue to burn your CD as normal using CD burning software such as Toast 5.2.

### **[Explanation]**

This is just a warning message to indicate that this Mac OS X version does not let you to directly use this CD-RW in the Finder environment. Using a program like Toast 5.2 will still burn CDs without problems.

## **2 Install Card Reader driver for your Mac**

1. Our Product only supports Mac 10.1.2 or later.
2. If your system is an earlier version, you will need to upgrade to a later version before continuing.
3. Before using the device, please insert the flash memory card into the correct slot.

Then plug in the USB cable and the Mac OS X will auto detect the external device.

